

This document provides instructions for unpacking, inspecting, connecting, operating and maintaining your External Pump Pack from Teledyne Advanced Pollution Instrumentation (TAPI). Your pump is intended for use in supplying vacuum to an instrument.

SAFETY FIRST

⚠ DANGER – RISK OF SERIOUS INJURY OR DEATH

- Do NOT pump flammable or explosive gases; pump only clean, dry air.
- Do NOT use in an area that contains flammable or explosive gases.
- Use pump pack only in Teledyne API approved pneumatic configurations.
- If ozone is generated in the gas train, an ozone destruct must be installed before the gas enters the scrubber.

⚡ WARNING – ELECTRICAL SHOCK HAZARD

- Use only the electrical cord provided by TAPI, which was built to carry the power rating of the pump, and do NOT modify the plug.
- Do not defeat the earth ground connection that is built into the assembly.
- Keep water or other liquids away from unit.
- Always maintain access to disconnect power from the pump.

⚠ CAUTION – AVOID PERSONAL INJURY OR DAMAGE TO INSTRUMENT

- Install this unit only where it will be protected from weather.
- Provide adequate clearance to prevent the unit from overheating and to protect all surrounding items from exhaust air, which can be hot.
- Wear proper eye protection to avoid injury from solid or liquid material that may be contained in air stream.
- Wear hearing protection to avoid damage from motor’s sound level which may exceed 70 dBA.
- Do not operate outside of cover in which the pump motor is enclosed.
- Operate within specified temperature range, 5°C – 40°C
- Keep away any corrosive gases, particulate material, water vapor, oil-based contaminants or other liquids from unit.
- When not in use, follow SHUTDOWN AND STORAGE procedures provided herein.
- Defer to instrument operating manual regarding specific recommendations on venting pump exhaust.

⚠ CAUTION – HOT SURFACE

- Surface can become very hot during operation; unplug pump and allow to cool before handling.

SPECIFICATIONS

	RATING	TYPICAL POWER CONSUMPTION
POWER	115 V~ 60 Hz, 3.0A	95 W
	220-240 V~ 50/60 Hz, 3.0A	95 W
OPERATING TEMPERATURE	5°C – 40°C	
WEIGHT	15 lbs (7 kg)	
HUMIDITY RANGE	0-95% RH non-condensing	
ENVIRONMENTAL CONDITIONS	Installation Category (Over voltage Category) II Pollution Degree 2 For indoor use only, at ≤ 2000 m altitude	

APPROVALS

SAFETY

IEC/EN 61010-1:2010 (3rd Edition), Safety requirements for electrical equipment for measurement, control and laboratory use.
CE: 2006/95/EC, Low-Voltage Directive

EMC

IEC/EN 61326-1, Class A Emissions/Industrial Immunity
EN55011 (CISPR 11), Group 1, Class A Emissions
FCC 47 CFR Part 15B, Class A Emissions
CE: 2004/108/EC, Electromagnetic Compatibility Directive

UNPACK AND INSPECT CONTENTS

Verify that there is no apparent external shipping damage to the pump assembly. If damage has occurred, please advise the shipper first, then Teledyne API.

INSTALLATION/SETUP/ELECTRICAL CONNECTIONS

Adhere to all cautionary messages in the “SAFETY FIRST” section of this manual when installing, setting up and connecting your pump.

The correctly wired power cord was included in your shipment; do not modify it or use any other cord. It is assembled and ready for use.

There is no ON/OFF switch: the pump begins running when its power cord is plugged into an electrical outlet.

1. Mount on a rigid operating surface.
2. Connect pump tubing from filter or scrubber cartridge to instrument exhaust.
3. Route an exhaust line from pump exhaust port through the opening next to the scrubber (refer to Figure 1), and vent according to the instrument’s operation manual.
4. Plug cord into an electrical outlet to start motor.

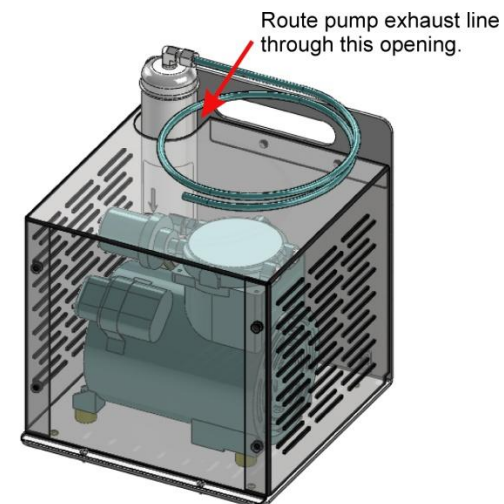


Figure 1. Pump Exhaust Line Route

OPERATION

Adhere to all cautionary messages in the “SAFETY FIRST” section of this manual when operating your pump.

SHUTDOWN AND STORAGE

To prevent pump damage, follow these shutdown and storage procedures:

1. Disconnect plumbing.
2. Run pump at least 5 minutes without plumbing.
3. Disconnect power cord from electrical outlet.
4. Store in clean, dust-free, moisture-free environment.

MAINTENANCE & TROUBLESHOOTING

NEVER ADD OIL TO THIS OIL-LESS PUMP.



FOR QUALIFIED MAINTENANCE PERSONNEL ONLY

- Heed all cautionary messages in the “SAFETY FIRST” section of this manual.
- Disconnect power, vent all lines, and allow the pump pack to cool before inspecting or performing maintenance on it.

CHANGING THE FILTER OR SCRUBBER

Whether your pump is equipped with a filter (FL49) or a scrubber (FL34), either one is provided in a self-contained, replaceable cartridge that requires changing as necessary.

See instrument manual for planned maintenance intervals and requirements.

1. Disconnect power to instrument.
2. Vent all air lines.
3. Allow unit, including scrubber, to cool enough to safely touch.
4. Remove four screws from cover to gain access to the filter or scrubber cartridge.
5. Swap used cartridge with new, and dispose of the used cartridge in accordance with local regulations.
6. Reinstall cover.

REBUILDING THE PUMP

When pump vacuum or flow is not satisfactory, rebuild pump with kit PU92 and follow kit instructions. See instrument manual for pressure/vacuum/flow warning limits.

TROUBLESHOOTING

Defer to instrument operating manual for troubleshooting guidance.

TECHNICAL SUPPORT

Teledyne API Technical Support

9480 Carroll Park Drive

San Diego, California 92121-5201 USA

Toll-free Phone: 800-324-5190

Phone: 858-657-9800

Fax: 858-657-9816

Email: sda_techsupport@teledyne.com

Website: <http://www.teledyne-api.com/>