



**TELEDYNE**  
ADVANCED POLLUTION INSTRUMENTATION  
A Teledyne Technologies Company

## MANUAL ADDENDUM

# ***MODEL 265E*** ***CHEMILUMINESCENCE OZONE*** ***ANALYZER***

(Addendum to Model 200E Operation Manual PN 04410)

© TELEDYNE ADVANCED POLLUTION INSTRUMENTATION  
9480 CARROLL PARK DRIVE  
SAN DIEGO, CA 92121-5201  
USA

Toll-free Phone: 800-324-5190  
Phone: 858-657-9800  
Fax: 858-657-9816  
Email: [api-sales@teledyne.com](mailto:api-sales@teledyne.com)  
Website: <http://www.teledyne-api.com/>



# IMPORTANT SAFETY INFORMATION

Important safety messages are provided throughout this manual for the purpose of avoiding personal injury or instrument damage. Please read these messages carefully. Each safety message is associated with a safety alert symbol, and are placed throughout this manual and inside the instrument. The symbols with messages are defined as follows:



**WARNING:** Electrical Shock Hazard



**HAZARD:** Strong oxidizer



**GENERAL WARNING/CAUTION:** Read the accompanying message for specific information.



**CAUTION:** Hot Surface Warning



**Do Not Touch:** Touching some parts of the instrument without protection or proper tools could result in damage to the part(s) and/or the instrument.



**Technician Symbol:** All operations marked with this symbol are to be performed by qualified maintenance personnel only.



**Electrical Ground:** This symbol inside the instrument marks the central safety grounding point for the instrument.

## CAUTION



This instrument should only be used for the purpose and in the manner described in this manual. If you use this instrument in a manner other than that for which it was intended, unpredictable behavior could ensue with possible hazardous consequences.

**NEVER use any gas analyzer to sample combustible gas(es)!**

### Note

For Technical Assistance regarding the use and maintenance of this instrument or any other Teledyne API product, contact Teledyne API's Customer Service Department:

Phone: 800-324-5190

Email: [api-customerservice@teledyne.com](mailto:api-customerservice@teledyne.com)

or by accessing various service options on our website at <http://www.teledyne-api.com/>.

# REVISION HISTORY

This section provides information regarding changes to this manual.

|   |             |  |
|---|-------------|--|
| <b>2011 December 07, M265E Addendum, 06626</b>                              |             |  |
| <b>Rev</b>  | <b>DCN</b>  | <b>Description of Changes</b>                              |
| <b>B</b>  | <b>6325</b> | <b>Specs update: Zero Noise, LDL, Zero and Span Drifts</b> |
| <b>2011 November 08, M265E Addendum, PN06626A, DCN6119, Initial Release</b> |             |  |

# TABLE OF CONTENTS

|   |            |
|---|------------|
| <b>IMPORTANT SAFETY INFORMATION .....</b>                     | <b>I</b>   |
| <b>REVISION HISTORY .....</b>                                 | <b>II</b>  |
| <b>TABLE OF CONTENTS.....</b>                                 | <b>III</b> |
| <b>1. INTRODUCTION.....</b>                                   | <b>5</b>   |
| 1.1. OVERVIEW.....  | 5          |
| <b>2. SPECIFICATIONS AND APPROVALS.....</b>                   | <b>7</b>   |
| 2.1. EPA EQUIVALENCY DESIGNATION.....                         | 8          |
| 2.2. COMPLIANCE STATEMENTS.....                               | 8          |
| 2.2.1. <i>Safety</i> .....                                    | 8          |
| 2.2.2. <i>EMC</i> .....                                       | 8          |
| 2.3. WARRANTY.....  | 8          |
| <b>3. GETTING STARTED.....</b>                                | <b>9</b>   |
| 3.1. UNPACKING.....   | 9          |
| 3.2. INSTRUMENT LAYOUT.....                                   | 11         |
| 3.2.1. <i>Front Panel</i> .....                               | 11         |
| 3.2.2. <i>Rear Panel</i> .....                                | 12         |
| 3.2.3. <i>Internal Chassis Layout</i> .....                   | 13         |
| 3.3. CONNECTIONS AND SETUP.....                               | 14         |
| 3.3.1. <i>Electrical and Pneumatic Connections</i> .....      | 14         |
| 3.4. STARTUP, FUNCTIONAL CHECKS, AND INITIAL CALIBRATION..... | 17         |
| 3.4.1. <i>Startup</i> .....                                   | 17         |
| 3.4.2. <i>Initial Calibration</i> .....                       | 18         |
| <b>4. MAINTENANCE.....</b>                                    | <b>21</b>  |
| 4.1. MAINTENANCE SCHEDULE.....                                | 21         |
| 4.2. MAINTENANCE ITEMS SPECIFIC TO THE MODEL 265E.....        | 21         |
| <b>5. PRINCIPLES OF OPERATION.....</b>                        | <b>23</b>  |
| <b>LIST OF FIGURES</b>  |            |
| FIGURE 3-1. FRONT PANEL.....                                  | 11         |
| FIGURE 3-2. REAR PANEL.....                                   | 12         |
| FIGURE 3-3. INTERNAL LAYOUT.....                              | 13         |
| FIGURE 3-4. PNEUMATICS, BASIC CONFIGURATION.....              | 16         |
| <b>LIST OF TABLES</b>   |            |
| TABLE 2-1. MODEL 265E SPECIFICATIONS.....                     | 7          |

This page intentionally left blank.

# 1. INTRODUCTION

This section presents a brief overview of the Model 265E; supplemental information may be found in the Model 200E Operation Manual.

## 1.1. OVERVIEW

The Model 265E is a close derivative of the Model 200E Chemiluminescence NOx Analyzer. This addendum provides an overview of the instrument with details of the features and functions that are specific to the Model 265E; it is intended as a supplement to the Model 200E operation manual (Teledyne API part number 04410). Note: it is imperative that before placing the analyzer into service, users familiarize themselves with the Model 200E manual, which describes in detail specific functionality common to both products, such as hardware adjustment during calibration, initializing communications with the product and trouble-shooting approaches.

This page intentionally left blank.



## 2. SPECIFICATIONS AND APPROVALS

Table 2-1 presents the specifications for the Model 265E analyzer, and Sections 2.1 and 2.2 present approvals and certifications.

**Table 2-1. Model 265E Specifications**

| PARAMETER                             | SPECIFICATION   |
|---------------------------------------|---|
| Ranges                                | 0-100 ppb to 0-2,000 ppb full scale, user selectable.   |
| Measurement Mode                      | Single Range or AutoRange   |
| Measurement Units                     | ppb, ppm, $\mu\text{g}/\text{m}^3$ $\text{mg}/\text{m}^3$   |
| Zero Noise <sup>1</sup>               | <0.15 ppb (RMS)   |
| Span Noise <sup>1</sup>               | <0.5% of reading (RMS) above 100 ppb  |
| Lower Detectable Limit                | <0.3 ppb  |
| Zero Drift (24 hours)                 | <0.5 ppb  |
| Span Drift (24 hours)                 | <0.5% of full scale   |
| Linearity                             | <1% of full scale   |
| Precision                             | <0.5% of reading  |
| Lag Time <sup>1</sup>                 | <10 sec   |
| Rise/Fall Time <sup>1</sup>           | <20 sec to 95%  |
| Sample Flow Rate                      | 500 $\text{cm}^3/\text{min} \pm 10\%$   |
| Reagent Gas                           | NO at 10,000 ppm $\pm 10\%$   |
| Reagent Flow                          | 5 $\pm$ 2 $\text{cm}^3/\text{min}$  |
| Environmental                         | Installation Category (Over-voltage Category) II<br>Pollution Degree 2  |
| Temperature Range                     | 5 – 40° C (with EPA equivalency)  |
| Humidity Range                        | 10-90% RH non-condensing  |
| Dimensions H x W x D                  | 7" x 17" x 23.5" (18 cm x 43 cm x 61 cm)  |
| Weight, Analyzer                      | 40 lbs (18 kg) (with internal pump)   |
| AC Power                              | 100 V – 120 V, 60Hz, 3.0A<br>220 V – 240 V, 50 Hz, 2.5A   |
| Analog Outputs                        | Four (4) Outputs  |
| Analog Output Ranges                  | All Outputs: 100 mV, 1 V, 5 V, 10 V<br>Two concentration outputs convertible to 4-20 mA isolated current loop option<br>All Ranges with 5% Under/Over Range |
| Analog Output Resolution              | 1 part in 4096 of selected full scale voltage   |
| Current Loop Option                   | 4-20 mA, isolated   |
| Status Outputs                        | 8 Status outputs from opto-isolators, 7 defined, 1 spare  |
| Control Inputs                        | 6 Control Inputs, 4 defined, 2 spare  |
| Serial I/O                            | COM1: RS232 (Multidrop option available)<br>COM2: RS-232 or RS-485 (Ethernet option and ModBus <sup>®</sup> interface available)                            |
| <sup>1</sup> As defined by the US EPA |   |

## 2.1. EPA EQUIVALENCY DESIGNATION

Teledyne API's Model 265E Chemiluminescence Ozone Analyzer received EPA approval for Designation EQOA-0611-199. The designation will be considered valid when the instrument is operated under the following conditions:

- on any full scale range between 0-100 ppb and 0-1000 ppb
- with any range mode (Single, Dual, or Auto Range)
- at any ambient temperature in the range of 5°C to 40°C
- with a TFE filter in the sample air inlet
- with a sample flow rate of  $500 \pm 50$  cm<sup>3</sup>/min (sea level)
- with the dilution factor set to 1
- with Temp/Press compensation ON
- in accordance with the appropriate associated instrument manuals
- with or without any of the following options:
  - Internal or external sample pump
  - Sample/Cal valve option
  - Rack mount with or without slides
  - 4-20 mA isolated current loop output

## 2.2. COMPLIANCE STATEMENTS

The Teledyne - API Model 265E analyzer was tested and certified for Safety and Electromagnetic Compatibility (EMC). This section presents the compliance statements for those requirements and directives.

### 2.2.1. Safety

IEC 61010-1:2001

### 2.2.2. EMC

EN61326 (1997 w/A1: 98) Class A, FCC Part 15 Subpart B Section 15.107 Class A, ICES-003 Class A (ANSI C63.4 1992) & AS/NZS 3548 (w/A1 & A2; 97) Class A.

## 2.3. WARRANTY

Refer to the Model 200E operation manual regarding the Warranty policy for the Model 265E.

## 3. GETTING STARTED

This section addresses the procedures for unpacking the instrument and inspecting for damage, and introduces the instrument layout, then presents the procedures for getting started: making electrical and pneumatic connections, and conducting an initial calibration check. Please see the Model 200E Operation Manual for more information.

### 3.1. UNPACKING



#### CAUTION – GENERAL SAFETY HAZARD

To avoid personal injury, always use two persons to lift and carry the Model 265E.

#### ATTENTION

#### COULD DAMAGE INSTRUMENT AND VOID WARRANTY

Printed Circuit Assemblies (PCAs) are sensitive to electro-static discharges too small to be felt by the human nervous system. Failure to use ESD protection when working with electronic assemblies will void the instrument warranty

See *A Primer on Electro-Static Discharge* in the accompanying Model 200E manual for more information on preventing ESD damage.



#### CAUTION - ELECTRICAL SHOCK HAZARD

Never disconnect PCAs, wiring harnesses or electronic subassemblies while analyzer is under power.

**CAUTION**

**Do not operate this instrument until you've removed dust plugs from SAMPLE and EXHAUST ports on the rear panel!**

**Note**

**It is recommended that you store shipping containers/materials for future use if/when the instrument should be returned to the factory for repair and/or calibration service. See Warranty section in this manual and shipping procedures on our Website at <http://www.teledyne-api.com> under Customer Support > Return Authorization.**

1. First, verify that there is no apparent external shipping damage. If damage has occurred, please advise the shipper first, then Teledyne-API. Save the packaging for shipper's examination.
2. Included with your analyzer is a printed record of the final performance characterization performed on your instrument at the factory. This record, titled *Final Test and Validation Data Sheet* (P/N 06627) is an important quality assurance and calibration record for this instrument. It should be placed in the quality records file for this instrument.
3. Carefully remove the top cover of the analyzer and check for internal shipping damage.
  - Remove the set screw located in the top, center of the front panel.
  - Remove the two screws fastening the top cover to the unit (one per side towards the rear).
  - Slide the cover backward until it clears the analyzer's front bezel.
  - Lift the cover straight up.
  - Check for internal shipping damage, and generally inspect the interior of the instrument to make sure all circuit boards and other components are in good shape and properly seated.
4. Reinstall the cover and screws, once the inspection is complete.
5. Check the voltage and frequency label on the serial number tag on the rear panel. Compare that to your local power before plugging the instrument into an outlet.

### 3.2. INSTRUMENT LAYOUT

Instrument layout includes front panel and display, rear panel connectors, and internal chassis layout.

#### 3.2.1. Front Panel

Figure 3-1 illustrates the front panel of the Model 265E analyzer.


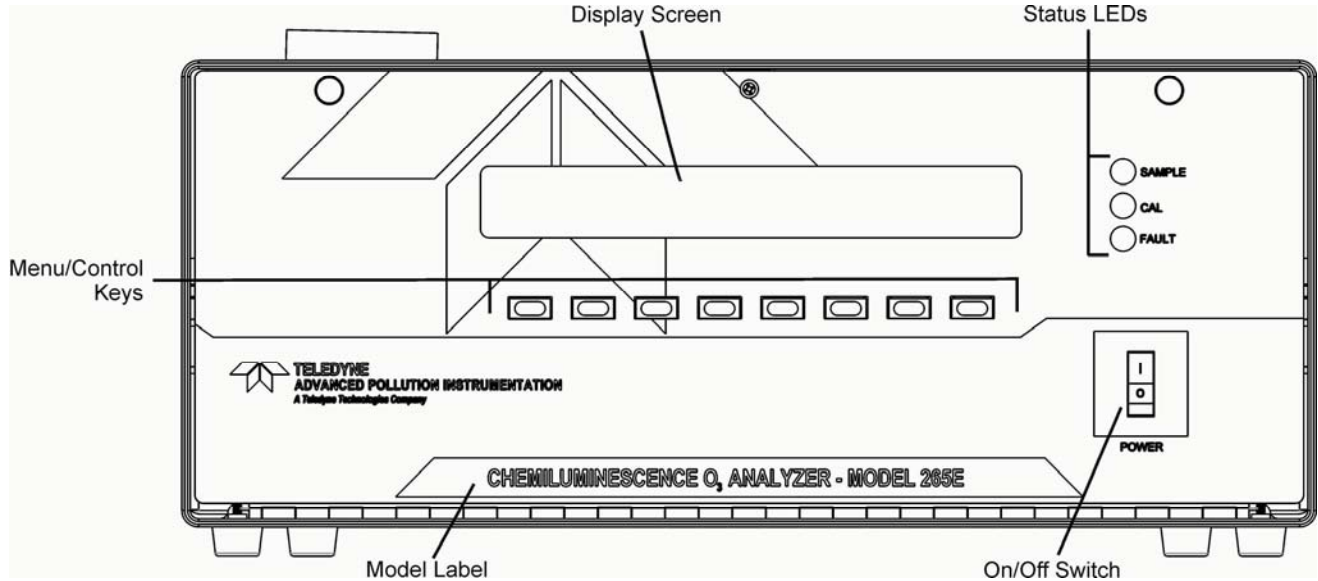


Figure 3-1. Front Panel

### 3.2.2. Rear Panel


Figure 3-2 illustrates the layout of the Model 265E analyzer's rear panel.

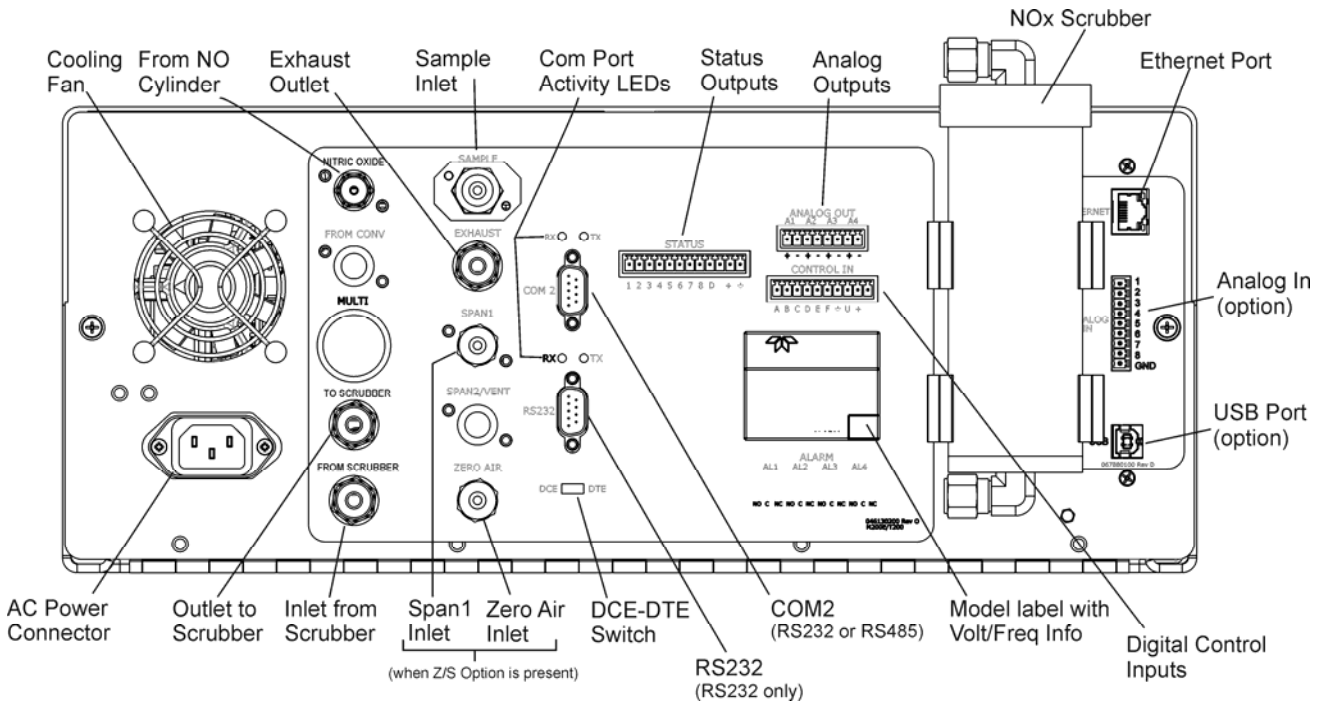

**Figure 3-2. Rear Panel**

### 3.2.3. Internal Chassis Layout

Figure 3-3 illustrates the location of the internal chassis components.

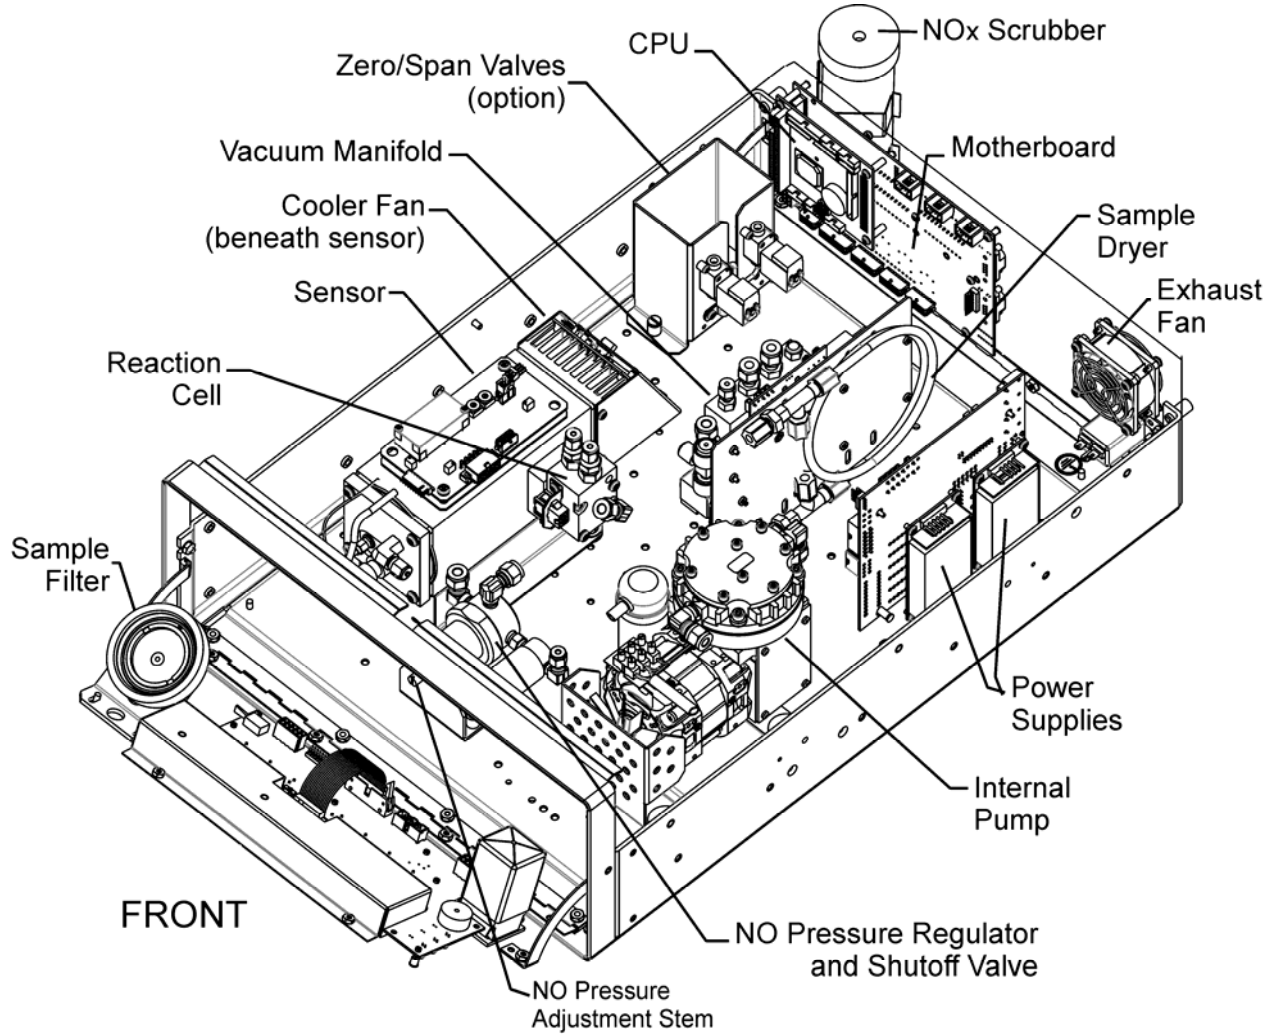

**Figure 3-3. Internal Layout**

### 3.3. CONNECTIONS AND SETUP

This section presents connection information to set up the instrument for operation.

#### 3.3.1. Electrical and Pneumatic Connections

1. Refer to Figure 3-2 for the rear panel electrical and pneumatic connectors.
2. Mount the NO<sub>x</sub> scrubber with base down (arrow labeled “FLOW” pointing down) onto the rear panel.
3. Connect tubing from NO<sub>x</sub> scrubber base fitting to rear panel fitting labeled “FROM SCRUBBER”.
4. Connect tubing from NO<sub>x</sub> scrubber top fitting to rear panel fitting labeled “TO SCRUBBER”.
5. Vent the EXHAUST port to atmospheric pressure and out of the room, because of its nitric oxide content.



**CAUTION  
GENERAL SAFETY HAZARD**

**Analyzer Exhaust Contains Nitric Oxide Gas.  
Vent pump exhaust to a well-ventilated area at atmospheric pressure.  
Obtain a Material Safety Data Sheet (MSDS) for this material. Read and  
rigorously follow the safety guidelines described there.**

6. Attach the sample inlet line to the SAMPLE inlet port. The pressure of the sample gas at the inlet port should be at ambient pressure and constant.
7. Using 1/8” stainless steel tubing, attach a cylinder with 10,000 ppm  $\pm 10\%$  of nitric oxide (NO) in nitrogen (N<sub>2</sub>), with an appropriate pressure regulator, to the 1/8” stainless steel port (labeled NITRIC OXIDE) on the rear panel as shown in Figure 3-2. Note: The NO cylinder’s pressure regulator should be set to deliver gas at 20 PSIG  $\pm 5$  PSIG.
8. Attach a strip chart recorder and/or data-logger to the appropriate analog output connections on the rear panel. See section on analog output connections in the Model 200E manual PN04410 for connector pin-out definitions.
9. Connect the power cord to the correct line voltage.



**WARNING****Lethal voltages present inside the analyzer's case.**

- Do not operate with cover off during normal operation.
- Before operation, check for correct input voltage and frequency.
- Do not operate without proper chassis grounding.
- Do not defeat the ground wire on power plug.
- Turn off analyzer power before disconnecting electrical subassemblies.

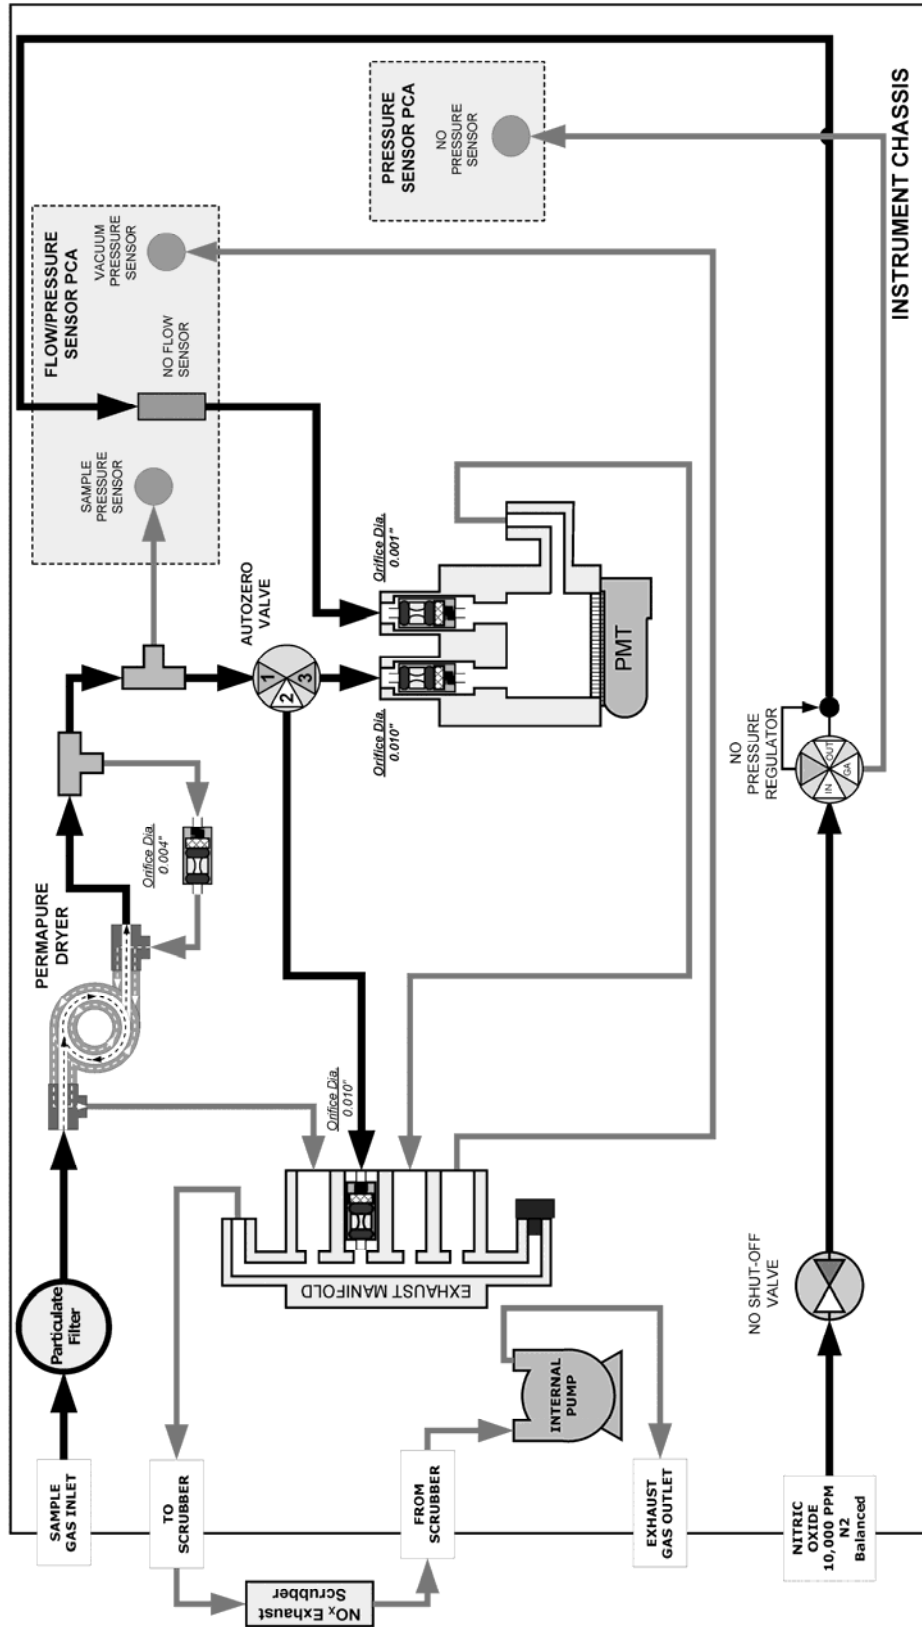


Figure 3-4. Pneumatics, Basic Configuration

## 3.4. STARTUP, FUNCTIONAL CHECKS, AND INITIAL CALIBRATION

### 3.4.1. Startup

1. Turn on the instrument by pressing the on/off rocker switch on the front panel. The display should immediately light, showing the computer's memory configuration, then the instrument type - Model 265E. A diagram of the software menu trees can be found in Appendix A of this addendum.
2. Thirty minutes after power-up an internal solenoid valve will open allowing Nitric Oxide gas to flow. Check the Nitric Oxide flow "NO FLOW" test function (TEST button, <TST TST> buttons) on the front panel to verify that the flow is  $5 \text{ cm}^3/\text{min} \pm 2. \text{ cm}^3/\text{min}$ .
  - If the flow is out of this range, check the Nitric Oxide pressure "NO PRESS" test function on the front panel display, to verify that the pressure is set to 5 PSIG +/- 1 PSIG.
  - If the pressure is out of this range, check that the cylinder regulator is set to 20 PSIG, then drop the front panel and use a flat head screw driver to turn the NO Pressure Adjustment Stem (Figure 3-3) to adjust the NO pressure regulator: clockwise to increase; counter-clockwise to decrease.

#### Note

-----  
**The NO pressure sets the flow; therefore, the 'NO PRESS' test function is of greater importance when setting up the analyzer. The "NO FLOW" test function is only provided to indicate the presence of gas flow.**  
-----

- The Model 265E analyzer requires about one hour for all internal components to heat to operating temperature.

#### IMPORTANT

##### ----- IMPACT ON READINGS OR DATA

**It is recommended that the analyzer operate for about four (4) hours before calibration and the collection of reliable readings.**  
-----

3. When the instrument is warmed up, check the TEST functions. All of the readings should compare closely with those in the Test Data sheet.
4. After checking the TEST functions, calibrate the instrument as laid out in Step 1 and Step 2 in Section 3.4.2, *Initial Calibration* of this addendum.

### 3.4.2. Initial Calibration

**Step 1** - Set the range, then enter the expected ozone span gas concentration:

| Step | Action                            | Comment  |
|------|-----------------------------------|--|
| 1.   | Press<br>CAL>CONC                 | This menu sequence causes the Model 265E to prompt for the expected span concentration. Enter the span value by pressing the button for each digit until the expected value is set.                |
| 2.   | Press ENTR                        | ENTR stores the expected span value. The internal formula is adjusted to compute this number when span gas concentration is input into the instrument.   |
| 5.   | Press EXIT                        | Returns instrument to SAMPLE mode.   |
| 6.   | Press<br>SETUP>RNGE><br>MODE>SNGL | If necessary, you may want to change the Range Mode. Choices are either Single or AutoRange. Normally the instrument is shipped in Single Range Mode.  |
| 7.   | Press<br>SETUP>RNGE><br>SET       | After the mode is set, you may want to set the maximum Range value. The instrument is shipped with the Range set at 500 ppb. This setting affects only your analog outputs, not the RS-232 output. |

**Step 2 - Calibrate the instrument: Zero/Span Calibration Procedure**

| Step | Action                     | Comment   |
|------|----------------------------|---|
| 1.   | Input zero gas             | Allow zero gas to flow passed the sample port on the rear of the instrument.  |
| 2.   | Press CAL                  | The Model 265E enters the calibrate mode from sample mode.  |
| 3.   | Wait 30 min                | Wait for the reading to stabilize at the zero value. If you wait less than 10 minutes the final zero value may drift. You may want to watch the stability “O <sub>3</sub> STB” test function (moving standard deviation) for its minimum value. |
| 4.   | Press ZERO                 | The ZERO button will be displayed once the concentration approaches zero.   |
| 5.   | Press ENTR                 | Pressing ENTR zeroes the instrument and adjusts both offset and slope so that Zero concentration is displayed.  |
| 6.   | Press EXIT, input Span gas | The Model 265E returns to the CAL menu. Now allow span gas to flow passed the instrument.   |
| 7.   | Wait 30 min                | Wait for the O <sub>3</sub> reading to stabilize at the span value (watch O <sub>3</sub> STB).  |
| 8.   | Press SPAN                 | The SPAN button should be displayed once the concentration approaches the span value. In certain circumstances at low span concentrations both the ZERO and SPAN buttons will appear. Do not press ZERO again when running span gas!            |
| 9.   | Press ENTR                 | Pressing ENTR to span the instrument actually changes the equations so that the concentration displayed is the same as the expected span concentration you entered above, thus spanning the instrument.   |
| 10.  | Press EXIT                 | Pressing EXIT returns the instrument to SAMPLE mode.  |

**IMPORTANT****IMPACT ON READINGS OR DATA**

Over time PMTs lose sensitivity, which is reflected by an increase in the O<sub>3</sub> slope test function during ongoing calibrations. If the slope falls outside the range of 0.7 to 1.3, a hardware adjustment to the PMT gain is required. The process involves the adjustment of both a high and low gain potentiometer, located on the preamp printed circuit board, while noting the “NORM PMT” test function value, for a particular concentration of Ozone span gas. Typically, the high voltage to the PMT is adjusted, such that, the “NORM PMT” is twice the measured O<sub>3</sub> concentration. See *PMT Sensor Hardware Calibration* in the Model 200E manual’s Repair & Troubleshooting section for detailed procedures.

**Step 3 - Review Quality of calibration: Calibration Quality Check Procedure**

| <b>Step</b> | <b>Action</b>  | <b>Comment</b>  |
|-------------|--|---|
| 1.          | Scroll the TEST function menu until the O <sub>3</sub> SLOPE is displayed. | The SLOPE value for O <sub>3</sub> should be $1.0 \pm 0.3$ . If the SLOPE value is in the acceptable range the instrument will perform optimally.   |
| 2.          | Scroll the TEST function menu until the O <sub>3</sub> OFFS is displayed.  | The Model 265E will display the offset parameter "O3 OFF" for the O <sub>3</sub> equation. This number should be near zero. A value of $\pm 10$ indicates calibration in the optimal range. |

The Model 265E is now ready to measure sample gas.

## 4. MAINTENANCE

### 4.1. MAINTENANCE SCHEDULE



#### CAUTION

The operations outlined in this chapter are to be performed by qualified maintenance personnel only.

Please refer to the *Maintenance Schedule & Procedures* section of the Model 200E manual for maintenance items and their interval schedules.

Exceptions:

- “Ozone cleanser” does not apply.
- The reaction cell window (optical filter) may not need to be cleaned annually, but rather on an “as needed” basis.

### 4.2. MAINTENANCE ITEMS SPECIFIC TO THE MODEL 265E



Annually replace the charcoal in the NO<sub>x</sub> scrubber, attached to the rear of the analyzer; Kit 005960000.

This page intentionally left blank.



## 5. PRINCIPLES OF OPERATION

The Teledyne API Model 265E analyzer is designed to measure the concentration of ozone using the chemiluminescence reaction below. The signal comes from the light emitted by the gas phase reaction of nitric oxide (NO) and ozone (O<sub>3</sub>) as follows:



The reaction of ozone with NO results in electronically excited NO<sub>2</sub>\* molecules as shown in the first equation. The excited NO<sub>2</sub>\* molecules release their excess energy by emitting a photon  $h\nu$  and dropping to a lower energy level as shown in the second equation. It has been shown that the number of emitted photons is directly proportional to the O<sub>3</sub> concentration in the sample stream.

Calibration of the instrument is performed in software and usually does not require physical adjustments to the instrument. During calibration, the microprocessor measures the photo multiplier tube (PMT) signal when gases with known amounts of O<sub>3</sub> are supplied, and stores these results in memory. The microprocessor uses these calibration values, along with the signal from the sample gas, the pressure readings for both the reaction cell and sample gas and box temperature in order to calculate a final concentration.

The product requires a cylinder of NO balanced in N<sub>2</sub>, which acts as the reagent gas. Both the electronic and pneumatic platforms are built using the current E series hardware. An additional precision regulator is added to keep the NO pressure constant, prior to the reaction cell. The internal pump draws sample through the sample dryer, removing ambient moisture, into the reaction cell. Periodically, an AutoZero valve switches the sample stream to the vacuum manifold, allowing the reaction cell to be evacuated and the analyzer to read zero background. The AutoZero readings are subtracted from the concentration readings, which improves zero baseline stability.

The analyzer uses two temperature-controlled critical orifices to deliver sample O<sub>3</sub> and reagent NO into the reaction cell. A diagram of the pneumatic design is shown in Figure 3-4.


This page intentionally left blank.


## **APPENDIX A: Models T265 and 265E Menu Trees**

The following menu trees in this appendix show the structure of the Sample menu and the Setup submenu. For additional details refer to Appendix A of the Model 200E operation manual.

This page intentionally left blank.

APPENDIX A-1: Software Menu Trees: the Sample Menu

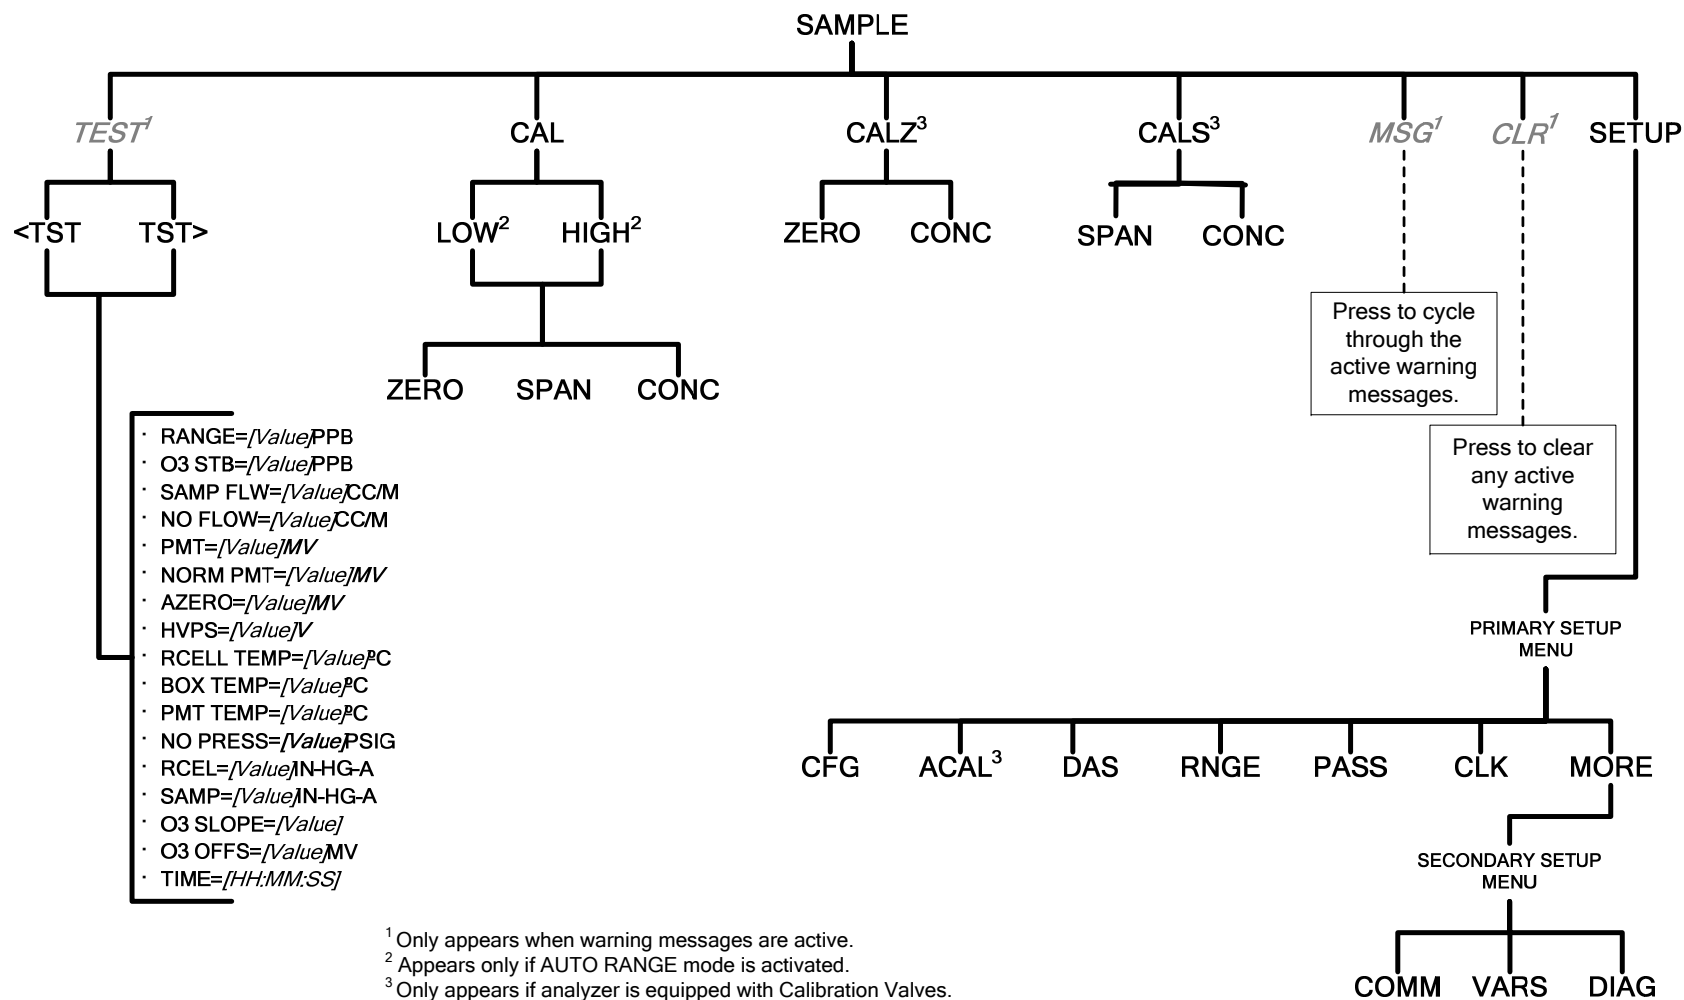

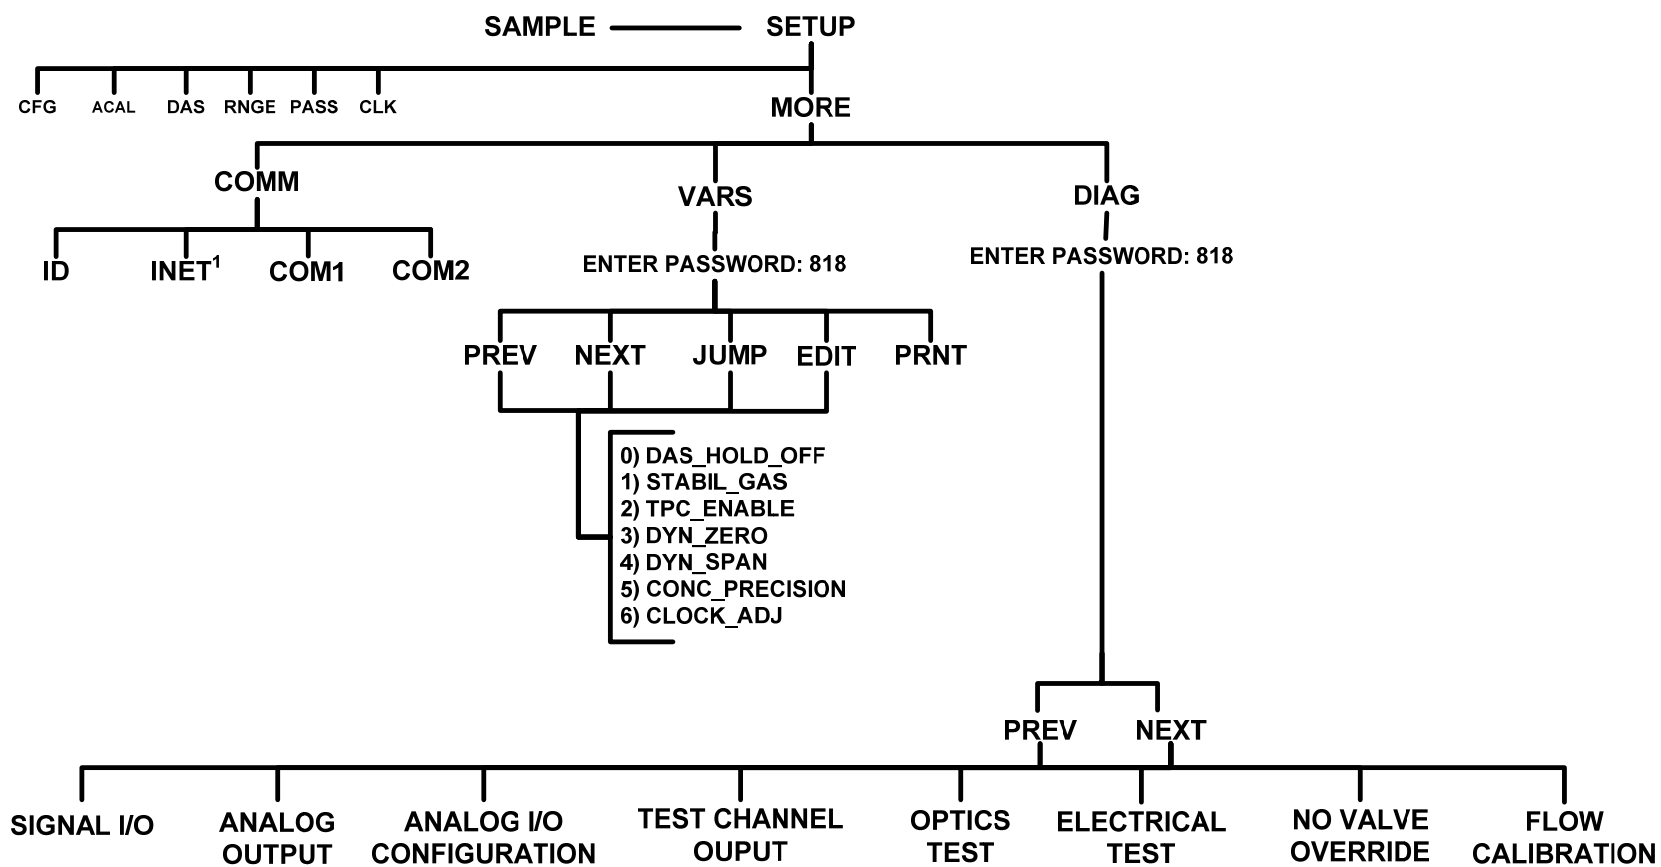

<sup>1</sup> E-Series models: Only appears if optional Ethernet PCA is installed.  
**NOTE:** When Ethernet PCA is present in E-Series models, COM2 submenu disappears.

**For all other menus, refer to main manual for your model (T265: T200 or Model 265E: M200E).**